



1. Βρείτε τον σειριακό αριθμό της συσκευής στο μενού Ρυθμίσεις > Δίκτυο > P2P
* Επιβεβαιώστε ότι η κατάσταση P2P είναι online.

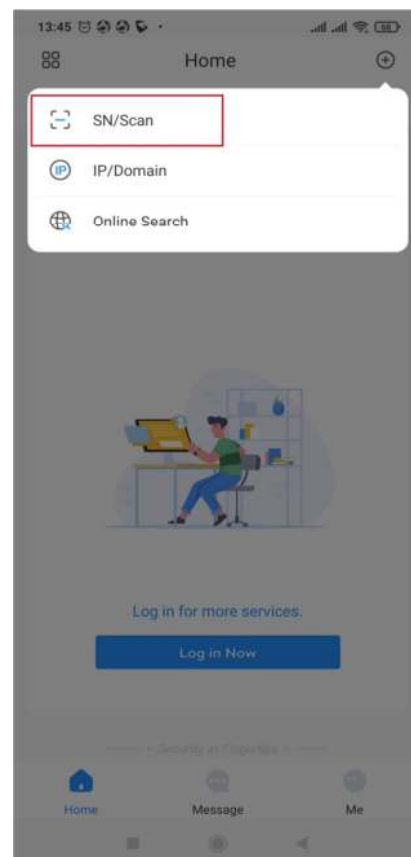


2. Πατήστε στο + και επιλέξτε SN/Scan.

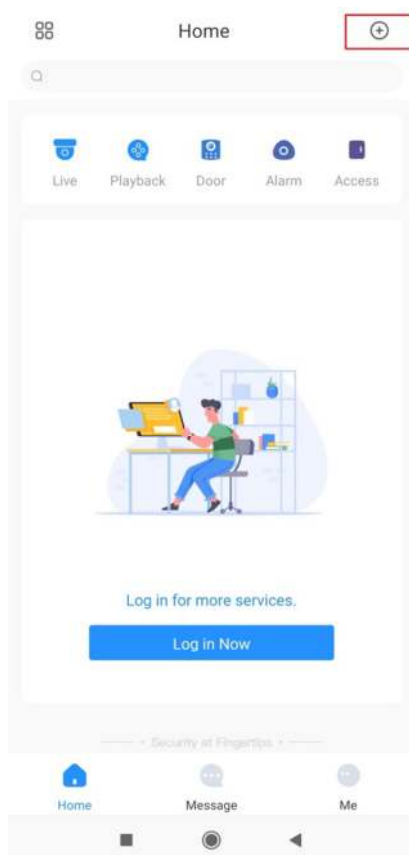


3. Επιτρέψτε στην εφαρμογή την πρόσβαση στην κάμερα για να διαβάσει το QR.




4. Εάν δεν έχετε πρόσβαση στην συσκευή μπορείτε να το προσθέσετε χειροκίνητα.

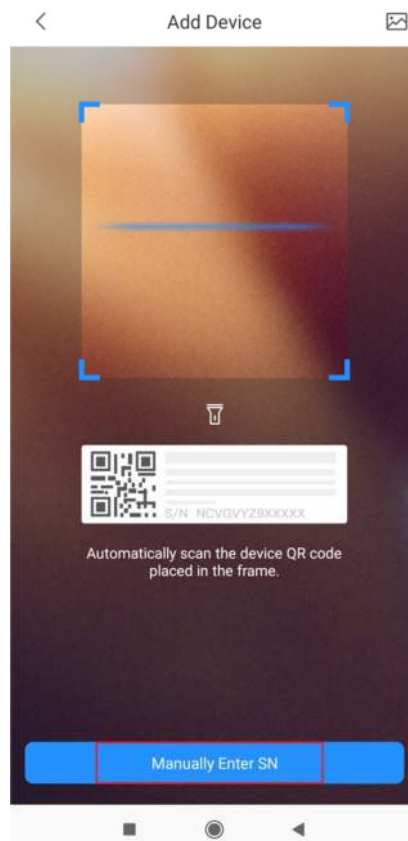

5. Γράψτε τον σειριακό αριθμό της συσκευής και πατήστε επόμενο (Next)

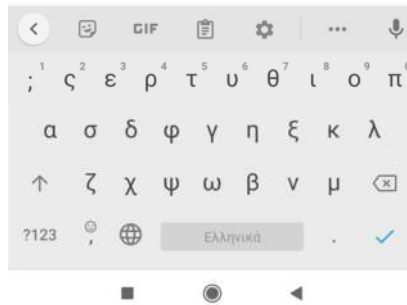

6. Επιλέξτε NVR (δικτυακό) ή DVR/XVR (αναλογικό)

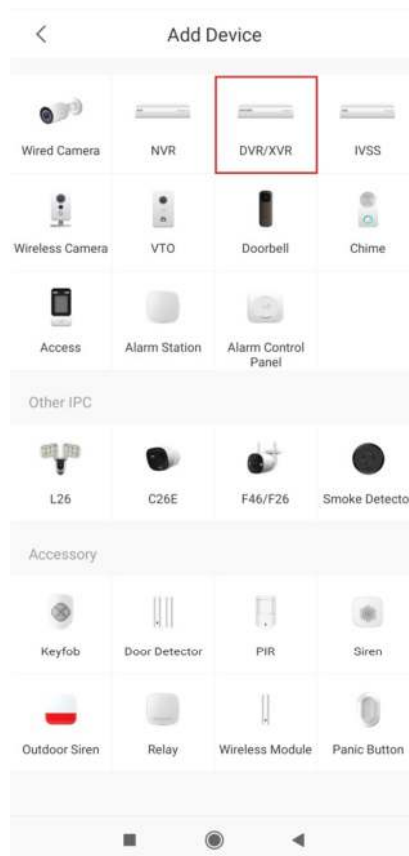

7. Συμπληρώστε της πληροφορίες στα αντίστοιχα πεδία και πατήστε Save.

The screenshot shows a mobile application interface for adding a device. At the top, there is a back arrow, the text 'Add Device', and a 'Save' button highlighted with a red box. Below this are several configuration fields: 'Add Mode' set to 'P2P', 'SN' set to '5J09467PBW80BE9', 'Device Name' (empty), 'Username' set to 'admin', and 'Device Password' (masked with asterisks and a visibility icon). The bottom of the screen shows standard Android navigation icons.

8. Ρυθμίστε την ζώνη ώρας (+02:00) και ενεργοποιήστε το DST.

The screenshot shows a mobile application interface for setting the time zone. At the top, there is a back arrow and the text 'Time Zone'. Below this, the 'Time Zone' is set to '(UTC-08:00)Pacific time (United States and Canada)'. The 'DST' toggle switch is turned on. Below the toggle, there is a note: 'DST time will be adjusted automatically after it is enabled'. At the bottom of the screen, there is a blue bar with the text 'Go' and a right-pointing arrow.

9. Μετά την προσθήκη θα γίνει αυτόματα η προβολή των καμερών.

